

## SR-28 INPUT SELECTION REMOTE SWITCHING

- December 19, 2012 -

When necessary an external switch can be used to change the SR-28 input selection.

Remove the top cover and wire the remote switch to the 2 pads labeled 'EXTERNAL SWITCH CONNECTION' on the SR-28 mother board. A 2 pin header can be soldered in the mother board with a connector at the end of the wires for easy disconnect.

This external switch should be momentary SPST and will operate in parallel with the front panel switch. Either one can be used. The front panel LED always indicates the currently selected input.

