

SR-28 SWITCHLESS POWER UP MODIFICATION

- November 26, 2013 -

In certain installations, it may be advantageous to deactivate the SR-28 power switch (front panel). With this modification, the SR-28 will automatically power up when the supply voltage is present.

However, note that the following will also be true with this modification. When power is applied to either power inputs of the SR-28:

- The power LED's will not come on (but the unit will be on)
- Time code input A will be the default source
- The INPUT A LED's (Input Signal & Input Selector) will be on.

Normal operation will resume after the POWER button is pressed.

MODIFICATION:

- Locate and remove Q3
- Place a small jumper as indicated in the picture below.

